




**STOVETOP**  
**FIRESTOP**<sup>®</sup>  
 ACCESSORIES

For more information and video demonstrations,  
 visit [www.stfs.com](http://www.stfs.com)

675-123, Rev - 02-2016

**INCLUDED IN THIS BAG**

- C** Alcohol Prep Pad (x1) 
- D** Metal Washers (x2) 
- E** Adhesive Disc (x2) 

**675-127**


**STOVETOP FIRESTOP  
 RANGEHOOD/STFS PLUS  
 ADHESIVE MOUNTING KIT**






© 2016, WilliamsRDM, Inc. All rights reserved. Stovetop Firestop and the Stovetop Firestop logo are either registered trademarks or trademarks of WilliamsRDM in the United States and/or other countries. Patent information at [www.stfs.com/patents](http://www.stfs.com/patents). 03-2016

**STOVETOP FIRESTOP  
 RANGEHOOD/STFS PLUS  
 ADHESIVE MOUNTING KIT**

**675-127**



**INCLUDED IN THIS BAG**

- C** Alcohol Prep Pad (x1) 
- D** Metal Washers (x2) 
- E** Adhesive Disc (x2) 


For more information and video demonstrations,  
 visit [www.stfs.com](http://www.stfs.com)

**STOVETOP**  
**FIRESTOP**<sup>®</sup>  
 ACCESSORIES

675-123, Rev - 02-2016


# Installation Instructions Adhesive Mounting Kit for Rangehood and STFS Plus

**Neglecting to follow these instructions could negatively affect product performance.**

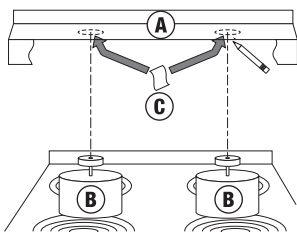


- 1** Use the enclosed prep pad (C) to clean the areas in range hood (A) where the magnet of each suppressor unit (B) will mount\*. Make sure area is completely dry & free of grease.


*\*To determine optimal mounting points, please follow the instructions included with your Rangehood or STFS Plus products. Mark these locations for reference.*

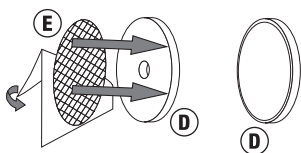

- 2** Peel backing from one side of adhesive disc (E). Then apply the exposed side of the adhesive disc to either side of metal washer (D).

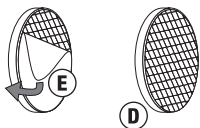


- 3** Peel the remaining backing from other side of adhesive disc (E).

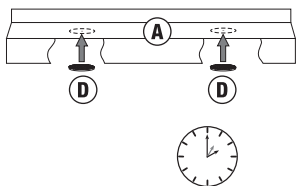

- 4** Firmly press exposed adhesive side of washer assembly (D+E) to the spot marked in range hood (A).

Wait 60 minutes.

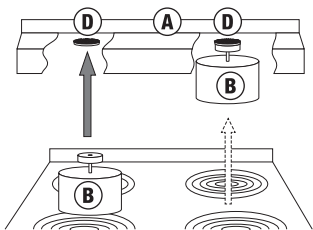

- 5** Once washers (D) are firmly secured to range hood (A), attach magnet of each suppressor unit (B) directly to washer.

**Installation is complete.**

More translations available online at [www.stfs.com/safety](http://www.stfs.com/safety)