

STOVETOP
FIRESTOP[®]
 ACCESSORIES


For more information and video demonstrations,
 visit www.stfs.com

677-1-65, Rev - 02-2016

INCLUDED IN THIS BAG


C

Alcohol Prep
 Pad (x1)



D

Adhesive Pad (x2)

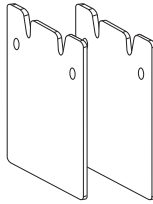

677-1-63


**STOVETOP FIRESTOP
 MICROHOOD
 ADHESIVE MOUNTING KIT**



© 2016, WilliamsRDM, Inc. All rights reserved. Stovetop Firestop and the Stovetop Firestop logo are either registered trademarks or trademarks of WilliamsRDM in the United States and/or other countries. Patent information at www.stfs.com/patents. 03-2016



**STOVETOP FIRESTOP
 MICROHOOD
 ADHESIVE MOUNTING KIT**

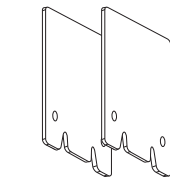

C Alcohol Prep
 Pad (x1)
D Adhesive Pad (x2)

INCLUDED IN THIS BAG

visit www.stfs.com

For more information and video demonstrations,


STOVETOP
FIRESTOP[®]
 ACCESSORIES

677-1-65, Rev - 02-2016

Installation Instructions


Adhesive Mounting Kit for Microhood

Neglecting to follow these instructions could negatively affect product performance.

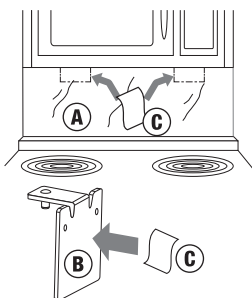


- 1** Use the enclosed prep pad (C) to clean the surfaces of each bracket (B) and both target areas* of the backsplash (A). Make sure area is completely dry & free of grease.


**To determine optimal mounting points, please follow the instructions included with your Microhood products.*

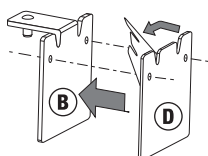

- 2** Remove backing from one side of the adhesive pad (D). Align holes and firmly press pad onto wall bracket (B).

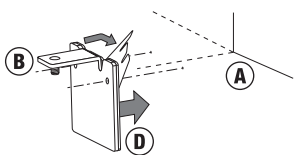


- 3** Remove backing from other side of adhesive pad (D). Align the holes in the wall bracket (B) to pencil marks on backsplash (A) marked earlier.

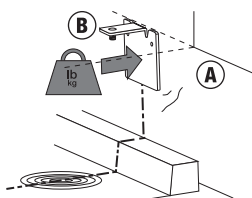

- 4** Press and hold wall bracket (B) firmly against backsplash (A) for 30 seconds.



- 5** Wait 60 minutes.

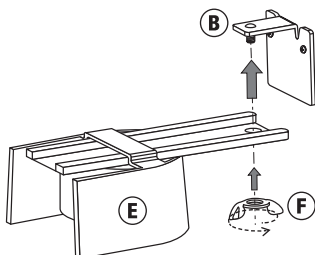

- 6** Secure main unit (E) to wall bracket (B) with wing nut (F).

Installation is complete.