



Installation Instructions Microhood Decorative Cover

Neglecting to follow these instructions could negatively affect product performance. These instructions assume that the STFS Microhood units (A) have already been installed under your microwave (G).

1 Use enclosed prep pad (E) to clean the areas on the main units (A) where tape strips (D) will mount. Make sure area is completely dry & free of grease.

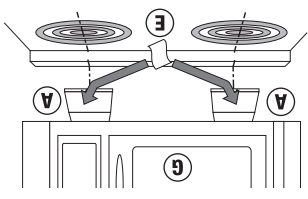

2 Peel one side of adhesive tape (D). Apply to angled face of main unit (A). Apply small amount of pressure to secure tape strip to main unit. Repeat this step for other unit.

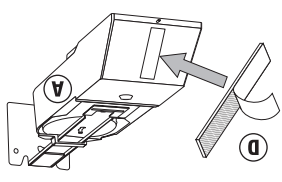

← Steps 3-9 continued inside


STOVETOP FIRESTOP DECORATIVE COVER TO BE USED WITH MICROHOOD P/N: 677-1 BLACK OR 677-2 WHITE

© 2017 WilliamsRDM, Inc. All rights reserved. StoveTop FireStop and the StoveTop FireStop logo are either registered trademarks or trademarks of WilliamsRDM in the United States and/or other countries. Patent information at www.stfs.com/patents.


INCLUDED IN THIS KIT

- (C)** Microhood Decorative Cover*, (x1)
- (D)** Double-sided Tape (x2)
- (E)** Alcohol Prep Pad (x1)


* Remove protective film from Decorative Cover prior to use, if applicable.

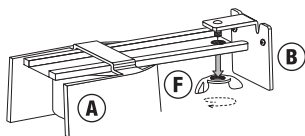


- 3** With two half-turns, loosen the wing nut (F) that secures the main unit (A) to the wall bracket (B). Do not dismount the main unit from the wall bracket.

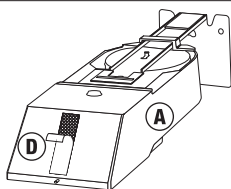


- 4** Peel remaining backing off both strips of tape (D).

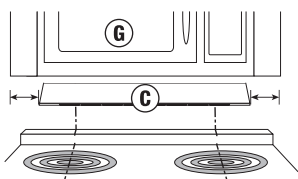


- 5** Center Decorative Cover (C) under the microwave (G)




- 6** Slide Decorative Cover (C) between underside of microwave (G) and housing of the main unit (A).

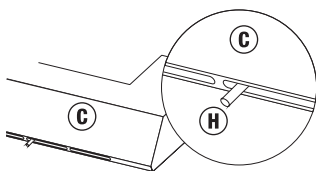

- 7** Make sure the fuse (H) extends through the openings in the front of the cover (C) without damage.

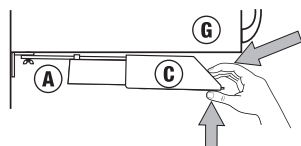

- 8** Once the cover (C) is aligned and the fuses (H) are safely exposed, press firmly on the bonding locations while lifting up on the main units (A) for 15 secs.

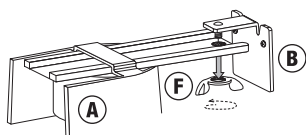


- 9** Secure main unit (A) back to wall bracket (B) by tightening wing nuts (F) on each side.

Installation is complete.


Installation Instructions Microhood Decorative Cover

Neglecting to follow these instructions could negatively affect product performance. These instructions assume that the STFS Microhood units (A) have already been installed under your microwave (G).

1 Use enclosed prep pad (E) to clean the areas on the main units (A) where tape strips (D) will mount. Make sure area is completely dry & free of grease.

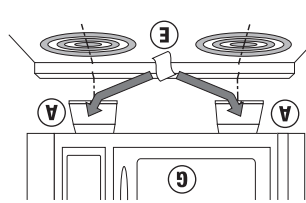

2 Peel one side of adhesive tape (D). Apply to angled face of main unit (A). Apply small amount of pressure to secure tape strip to main unit. Repeat this step for other unit.

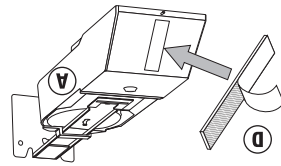

INCLUDED IN THIS KIT

(C) Microhood Decorative Cover*, (x1)

(D) Double-sided Tape (x2)

(E) Alcohol Prep Pad (x1)


* Remove protective film from Decorative Cover prior to use, if applicable.

STOVETOP FIRESTOP DECORATIVE COVER
TO BE USED WITH MICROHOOD
P/N: 677-1 BLACK OR 677-2 WHITE


© 2017 WilliamsRDM, Inc. All rights reserved. StoveTop FireStop and the StoveTop FireStop logo are either registered trademarks or trademarks of WilliamsRDM in the United States and/or other countries. Patent information at www.stfs.com/patents.

Steps 3-9 continued inside


677-1-75, Rev B, 01/2017

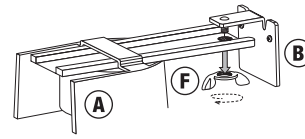


3 With two half-turns, loosen the wing nut (F) that secures the main unit (A) to the wall bracket (B). Do not dismount the main unit from the wall bracket.

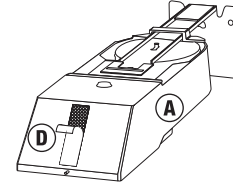


4 Peel remaining backing off both strips of tape (D).

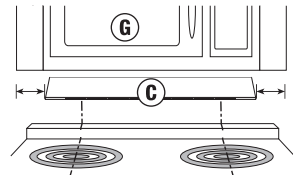


5 Center Decorative Cover (C) under the microwave (G).




6 Slide Decorative Cover (C) between underside of microwave (G) and housing of the main unit (A).

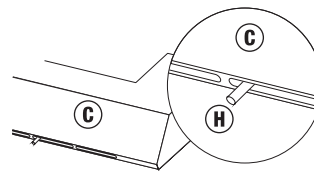

7 Make sure the fuse (H) extends through the openings in the front of the cover (C) without damage.

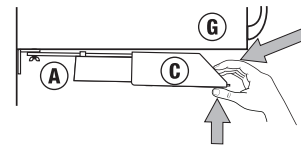

8 Once the cover (C) is aligned and the fuses (H) are safely exposed, press firmly on the bonding locations while lifting up on the main unit (A) for 15 secs.

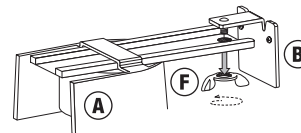

9 Secure main unit (A) back to wall bracket (B) by tightening wing nuts (F) on each side.

Installation is complete.

More translations available online at www.stfs.com/safety

STOVETOP FIRESTOP®

ACCESSORIES

For more information and video demonstrations,
visit www.stfs.com

677-1-75, Rev B, 01/2017

INCLUDED IN THIS KIT

- C** Microhood Decorative
Cover*, (x1)



- D** Double-sided
Tape (x2)



- E** Alcohol Prep
Pad (x1)




** Remove protective film from Decorative Cover
prior to use, if applicable.*

**STOVETOP FIRESTOP DECORATIVE COVER
TO BE USED WITH MICROHOOD
P/N: 677-1 BLACK OR 677-2 WHITE**

Installation Instructions Microhood Decorative Cover


Neglecting to follow these instructions could negatively affect product performance. These instructions assume that the STFS Microhood units (A) have already been installed under your microwave (g).

Use enclosed prep pad (E) to clean the areas on the main units (A) where tape strips (D) will mount. Make sure area is completely dry & free of grease.

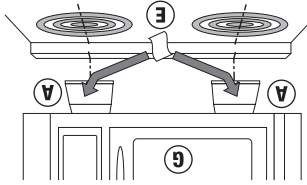

1


Peel one side of adhesive tape (D). Apply to angled face of main unit (A). Apply small amount of pressure to secure tape strip to main unit. Repeat this step for other unit.

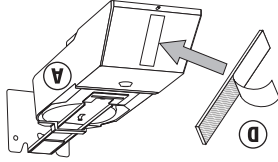


2

Steps 3-9 continued inside




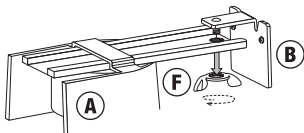


- 3** With two half-turns, loosen the wing nut (F) that secures the main unit (A) to the wall bracket (B). Do not dismount the main unit from the wall bracket.

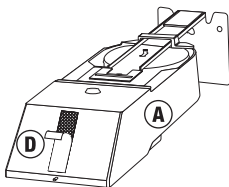

- 4** Peel remaining backing off both strips of tape (D).

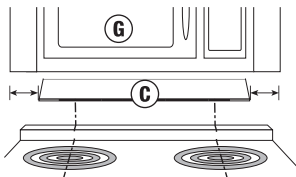


- 5** Center Decorative Cover (C) under the microwave (G)




- 6** Slide Decorative Cover (C) between underside of microwave (G)


and housing of
the main unit (A).

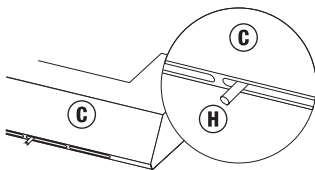

- 7** Make sure the fuse (H) extends through the openings in the front of the cover (C) without damage.

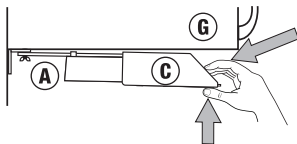

- 8** Once the cover (C) is aligned and the fuses (H) are safely exposed, press firmly on the bonding locations while lifting up on the main units (A) for 15 secs.

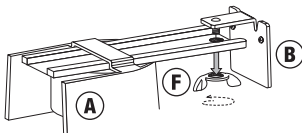

- 9** Secure main unit (A) back to wall bracket (B) by tightening wing nuts (F) on each side.

**Installation is
complete.**

More translations available online at www.stfs.com/safety